

(WORTH1.TTT) 24025
WORTH ONE DEPARTURE



AL-6444 (FAA)

MESQUITE METRO (HQZ)
MESQUITE, TEXAS

REGIONAL DEP CON
125.2 343.65
CTAF
120.3

**TOP ALTITUDE:
ASSIGNED BY ATC**

RADAR and DME required.

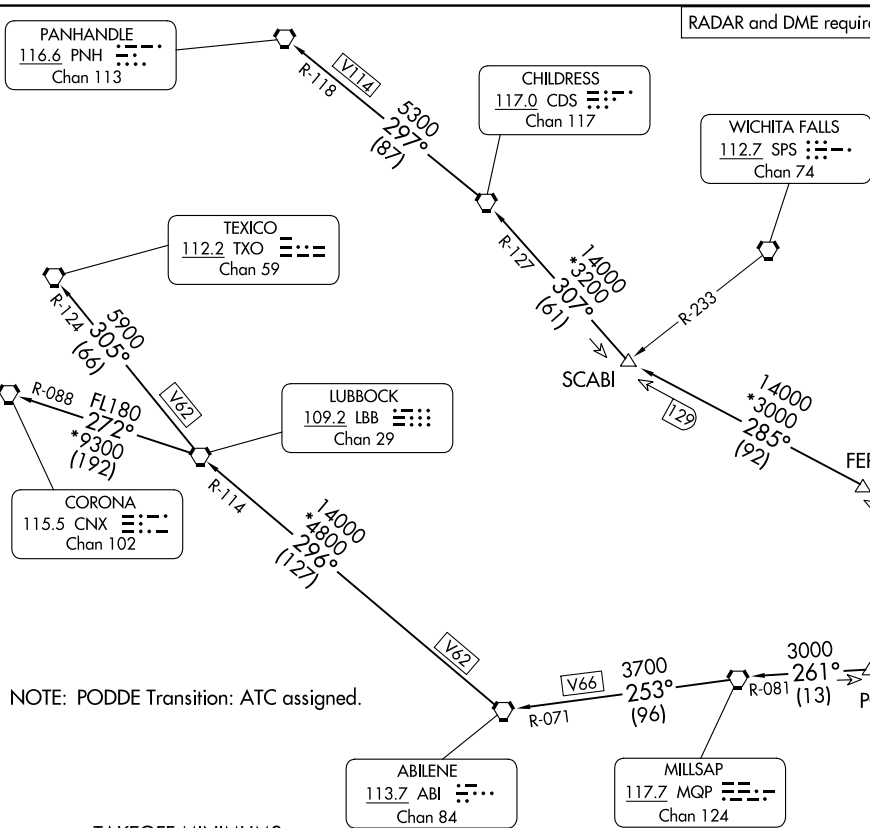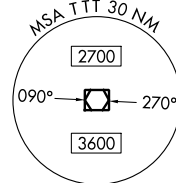

NOTE: PODDE Transition: ATC assigned.

TAKEOFF MINIMUMS
Rwys 18, 36: Standard.

(CONTINUED ON FOLLOWING PAGE)

NOTE: Chart not to scale.

SC-2, 22 FEB 2024 to 21 MAR 2024

WORTH ONE DEPARTURE
(WORTH1.TTT) 251AN24

MESQUITE, TEXAS
MESQUITE METRO (HQZ)

▼	DEPARTURE ROUTE DESCRIPTION
	When entering controlled airspace, fly assigned heading for RADAR vectors to appropriate route. Maintain ATC assigned altitude. <u>ABILENE TRANSITION (WORTH1.ABI):</u> From over TTT VOR/DME on TTT R-250 to PODDE, then on MQP R-081 to MQP VORTAC, then on MQP R-253 and ABI R-071 to ABI VORTAC. <u>CHILDRESS TRANSITION (WORTH1.CDS):</u> From over TTT VOR/DME on TTT R-285 to SCABI, then on CDS R-127 to CDS VORTAC. <u>CORONA TRANSITION (WORTH1.CNX):</u> From over TTT VOR/DME on TTT R-250 to PODDE, then on MQP R-081 to MQP VORTAC, then on MQP R-253 and ABI R-071 to ABI VORTAC, then on ABI R-296 and LBB R-114 to LBB VORTAC, then on LBB R-272 and CNX R-088 to CNX VORTAC. <u>LUBBOCK TRANSITION (WORTH1.LBB):</u> From over TTT VOR/DME on TTT R-250 to PODDE, then on MQP R-081 to MQP VORTAC, then on MQP R-253 and ABI R-071 to ABI VORTAC, then on ABI R-296 and LBB R-114 to LBB VORTAC. <u>PANHANDLE TRANSITION (WORTH1.PNH):</u> From over TTT VOR/DME on TTT R-285 to SCABI, then on CDS R-127 to CDS VORTAC, then on CDS R-297 and PNH R-118 to PNH VORTAC. <u>PODDE TRANSITION (WORTH1.PODDE):</u> From over TTT VOR/DME on TTT R-250 to PODDE. <u>TEXICO TRANSITION (WORTH1.TXO):</u> From over TTT VOR/DME on TTT R-250 to PODDE, then on MQP R-081 to MQP VORTAC, then on MQP R-253 and ABI R-071 to ABI VORTAC, then on ABI R-296 and LBB R-114 to LBB VORTAC, then on LBB R-305 and TXO R-124 to TXO VORTAC.