


GAVIOTA THREE DEPARTURE (GVO3•GVO)

LOWPOC, CALIFORNIA

ATIS	AL-770 [USSF]									
133.125	257.975	Rwy	Knots	60	120	180	240	300	360	
GND CON		12	V/V(fpm)	330	660	990	1320	1650	1980	
121.75	275.8	Minimum Climb Rate to 1500.								
CINC DEI	121.75 275.8									
VANDENBERG TOWER ★	124.95 326.2									
SANTA BARBARA DEP CON	124.15 327.8									

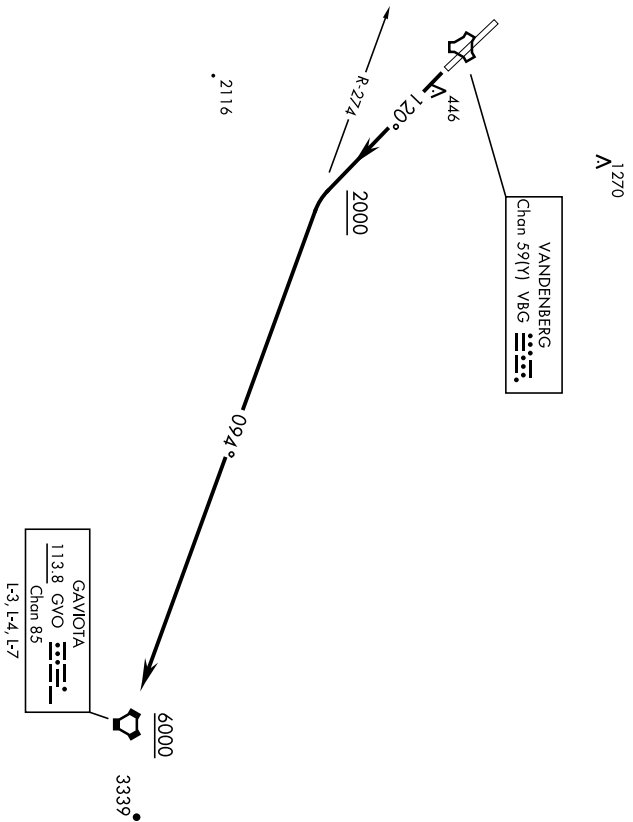

Use extreme caution for extensive UAS ops in the vicinity

▼

DEPARTURE ROUTE DESCRIPTION

TAKE-OFF Rwy 12: Climb on track 120° to 2000. Then climbing left turn to intercept the GVO VORTAC R-274 inbound to GVO. Cross GVO at or above 6000. Expect vectors to first filed fix/ route prior to GVO.

VANDENBERG THREE DEPARTURE (VBG3 • MGO)

LOMPOC, CALIFORNIA

ATIS
133.125 257 975
GND CON
121.75 275.8
CLNC DEL
121.75 275.8
VANDENBERG TOWER ★
124.95 326.2
SANTA BARBARA DEP CON
124.15 327.8

AL-770 [USF]

4000

MORRO BAY
112.4 MGO

2808

Minimum Climb Rate to 700.

Rwy

Knots

60

120

180

240

300

360

V/V(fpm)

280


560

840

1120

1400

1680

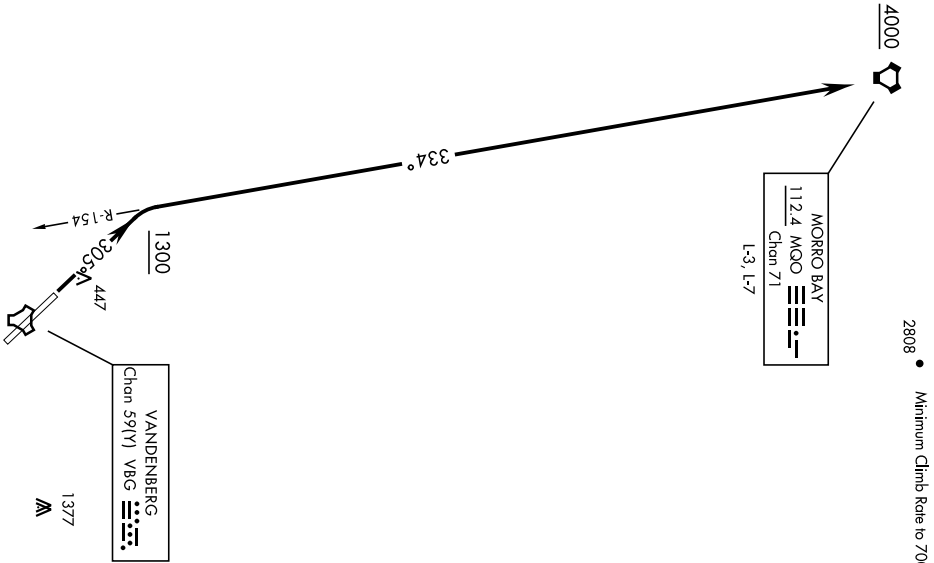

Use extreme caution for extensive UAS ops in the vicinity

DEPARTURE ROUTE DESCRIPTION

TAKE-OFF Rwy 30: Climb on track 305° to intercept MGO VORTAC R-154 at or above 1300 direct to MGO. Cross MGO at or above 4000. Expect vectors to first filed fix/route prior to MGO.